




TAGA
HARMONY

TA-900MULTI / TA-600MULTI

CUSTOM INSTALL 4-ZONE STEREO AMPLIFIERS

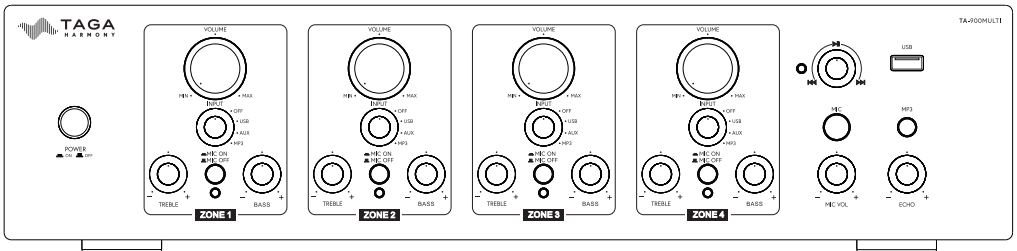

Instruction manual

Introduction

Thank you for purchasing this TAGA Harmony amplifier.

The TA MULTI is a perfect solution for residential as well as commercial installations in restaurants, pubs, shops, conferencing rooms, fitness clubs for both background music and voice playback systems.

A single TA MULTI amplifier allows to build a cost-effective multi-room audio installation and play different music in each of 4 zones (from 3 inputs) with independent volume and sound control for each, and to broadcast voice messages to selected zones simultaneously.

High and constant power is delivered by an oversized, audiophile grade toroidal transformer.

The TA MULTI integrated amplifier offers the finest music performance at this price level and perfect matching with most speakers available in the market.

It utilizes advanced materials, state of the art engineering and innovate design by an international team of professional designers.

It delivers pure and distortion-limited power as well as rich sound performance with stunning accuracy, soundstage and sensational dynamics.

KEY FEATURES:

- **Multi-room sound** 4-zone, high-power stereo amplifier able to drive four pairs of speakers (from 4 to 16Ω) – a cost-efficient and easy way to deliver sound to many rooms.
- **Each zone with independent:** source audio input selection (out of 3 onboard), volume and sound (treble / bass) regulations to play individual music at different volume levels in separate rooms.
- **Built-in microphone input** with a mixing and echo control is a perfect solution for voice broadcasting to selected zones.
- **USB Input** to quickly and easily play music from a USB flash drive (supports APE / FLAC / MP3 and WAV files).
- **MP3 3.5 mm (1/8") stereo input** on the front panel to quickly connect a laptop, smartphone or tablet.
- **RCA stereo input** at the rear to hook additional equipment like a CD player, radio tuner or other analog devices.
- **Force-air cooling** is specifically designed for long working time.
- **[TA-900MULTI] Independent preamplifier output to each zone** - for external amplifying or recording device or powered speakers or subwoofer.

The removable IEC power cable gives you an option to upgrade your system with a premium power cable in any time.

Cleaning

Do not use strong or abrasive cleaners. Use a damp, soft cloth for cleaning.

Specifications and the latest instruction manual edition

Full technical specifications and the latest edition of the instruction manual are available on www.Tagaharmony.com.

Contents

Safety Instructions	4
Front and Rear Panel	6
Hooking Up Speaker Cables	7
Hooking Up the Amplifier	8
Operation	10
Play from a USB Flash Drive	12
Additional Information	13
Specifications	14

Safety Instructions

IMPORTANT
READ THIS SECTION CAREFULLY BEFORE PROCEEDING!



CAUTION

RISK OF ELECTRIC SHOCK
DO NOT OPEN



WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE. DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The triangle containing a lightning symbol is intended to alert the user to the presence of uninsulated dangerous voltages within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



An exclamation mark in a triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPARATUS TO RAIN OR MOISTURE, AND OBJECTS FILLED WITH LIQUIDS, SUCH AS VASES, SHOULD NOT BE PLACED ON THIS APPARATUS.

CAUTION: TO PREVENT ELECTRIC SHOCK, FULLY AND SECURELY INSERT THE POWER CABLE PLUG INTO THE POWER OUTLET, AND POWER CABLE CONNECTOR INTO THE UNIT SOCKET (IF THIS UNIT IS NOT EQUIPPED WITH AN INTEGRATED [ATTACHED] POWER CORD).

CAUTION: FOR CONTINUED PROTECTION AGAINST RISK OF FIRE, REPLACE THE FUSE (IF THE UNIT IS EQUIPPED WITH A USER REPLACEABLE FUSE) ONLY WITH THE SAME AMPERAGE AND VOLTAGE TYPE. IN CASE WHEN THE UNIT IS NOT EQUIPPED WITH A USER REPLACEABLE FUSE - REFER REPLACEMENT TO QUALIFIED SERVICE PERSONNEL.

WARNING: THE UNIT MAY BECOME HOT. ALWAYS PROVIDE ADEQUATE VENTILATION TO ALLOW FOR COOLING. DO NOT PLACE THE UNIT NEAR A HEAT SOURCE, OR IN SPACES THAT CAN RESTRICT VENTILATION.

Safety Instructions

1. Read Instructions - All the safety and operating instructions should be read before the product is operated.
2. Retain Instructions - The safety and operating instructions should be retained for future reference.
3. Heed Warnings - All warnings on the product and in the operating instructions should be adhered to.
4. Follow Instructions - All operating and use instructions should be followed.
5. Cleaning - Unplug this product from the power outlet before cleaning. Do not use liquid cleaners or aerosol cleaners.
6. Water and Moisture - Do not use this product near water - for example, near a bath tub, wash bowl, kitchen sink or laundry tub; in a wet basement; or near a swimming pool; and the like. These precautions also apply to the power cord.
7. Accessories - Do not place this product on an unstable cart, stand, tripod, bracket or table. The product may fall, causing serious injury to a child or adult and serious damage to the product. Use only with a cart, stand, tripod, bracket or table recommended by the manufacturer or sold with the product. Any mounting of the product should follow manufacturer's instructions and should use a mounting accessory recommended by the manufacturer.
8. Ventilation - This unit may be equipped with slots and openings in the cabinet (housing) which are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product should be not placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to. For products equipped with a separate power supply unit, leave at least 5cm (2in.) of free space on all sides and the top of the power supply.
9. Power Sources - This product should be operated only from the type of power source indicated on the marking label (placed on the product and/or, if applicable, on a separate power supply unit). If you are not sure of the type of power supply in your home, consult your product dealer or local power company. For products intended to operate from battery power or other sources, refer to the operating instructions.
10. Grounding and Polarity - some units for proper operation or to take full advantage of their capabilities may require to be connected to a grounded power outlet - refer to the user manual for more information.
Some units may have markings for the live (L) and neutral (N) conductors for power - in order to take full advantage of capabilities of such products, it is recommended to properly connect the polarity according to the markings on the unit - refer to the user manual for more information. Connecting the polarity not in accordance with the markings will not affect the durability and reliability of the device.
11. Power-cord Protection - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles and the point where they exit from the product.
12. Lighting - For added protection for this product during a lighting storm or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or system cables. This will prevent damage to the product due to lighting and power-line surges.
13. Overloading - Do not overload wall outlets, extension cords or integral convenience receptacles as this can result in a risk of fire or electric shock.
14. Object and Liquid Entry - Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Do not expose this apparatus to dripping or splashing and ensure that no objects filled with water, such as vases are placed on the apparatus.
15. Servicing - Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
16. Damage Requiring Service - Unplug this product from wall outlet and refer servicing to qualified personnel under the following conditions:
 - when power supply cord or plug is damaged;
 - if liquid has been spilled or objects have fallen into the product;
 - if the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will require extensive work by a qualified technician to restore the product to its normal operation;
 - if the product has been dropped or damaged in any way;
 - if the product exhibits a distinct change in performance - this indicates a need for a service.
17. Replacement Parts - when replacement parts are required, be sure the technician has used replacement parts specified by the manufacturer or with the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.
18. Safety Check - Upon completion of any service or repairs to this product, ask the service technician to perform safety check to determine that the products is in proper operating condition.
19. Wall of ceiling mounting - The product should be mounted to a wall or ceiling only as recommended by the manufacturer.
20. Heat - The product should be situated away from heat sources such as radiators, heat registers, stoves or other products (including amplifiers) that produce heat.
21. [Refers to products equipped with vacuum tubes] Tube Cage or cover - For your safety and to protect the vacuum tubes this product may be equipped with the factory installed vacuum tube cage or cover.
It is not recommended to remove the cage or cover unless it is required to change the vacuum tubes.
When the cage or cover is removed - do not touch the vacuum tubes - they may be hot and burn the skin!
22. Operating Environment - Operating environment temperature and humidity of the unit: +5°C to +35°C (+41°F to +95°F); less than 85% RH (cooling slots not blocked).


PACKAGING WARNING

The packaging may contain elements such as plastic, that **should be kept away from small children.**

The thin foil or small elements can stick to the nose and mouth, or may be swallowed and prevent breathing.



Front and Rear Panel

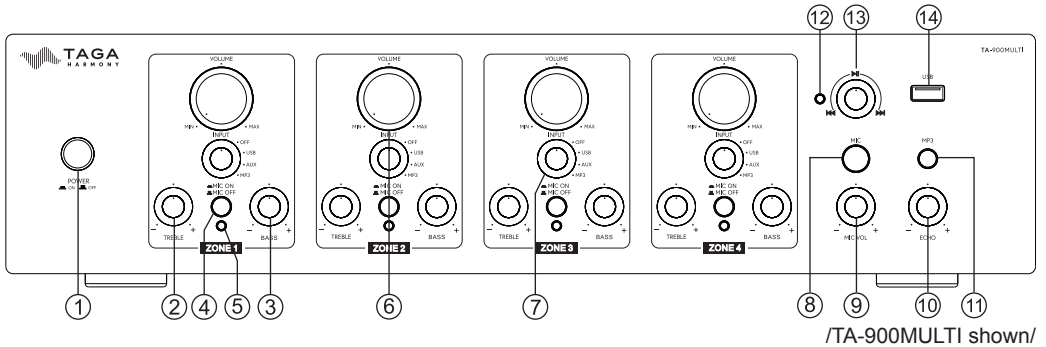


/TA-900MULTI shown/

Front Panel

1. Power Switch (ON and OFF) and Power Status Indicator (around the Power Switch)

INDIVIDUAL FOR ZONE 1 / ZONE 2 / ZONE 3 / ZONE 4

2. Treble Regulator
3. Bass Regulator
4. Microphone Switch (ON and OFF)
5. Microphone LED Indicator
6. Volume Regulator
7. Input Selector (OFF, USB, AUX, MP3)
8. Microphone 6.35 mm (1/4") Input
9. Microphone Level Regulator
10. Microphone Echo Regulator
11. MP3 3.5 mm (1/8") Stereo Input
12. USB Input LED Indicator
13. USB Knob (Play/Pause, Next/Previous)

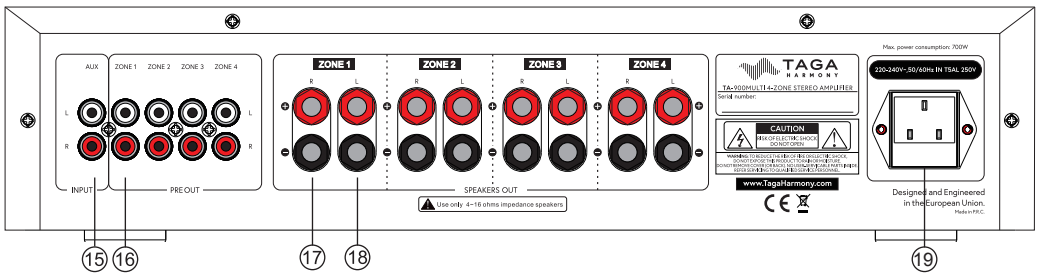

/TA-900MULTI shown/

Rear Panel

15. AUX Stereo RCA Input

INDIVIDUAL FOR ZONE 1 / ZONE 2 / ZONE 3 / ZONE 4

16. Preamplifier Stereo RCA Output
17. Speaker Group ZONE Right Channel Output (Speaker Connectors)
18. Speaker Group ZONE Left Channel Output (Speaker Connectors)
19. Power Cable Input and Fuse Box



A blown fuse should be only exchanged for exactly the same type as indicated on the rear amplifier panel.

The Power Cable should be disconnected!

Hooking Up Speaker Cables

The Speaker Connectors can accommodate up to 10AWG speaker cables as well as most of popular plugs (banana etc.). It is recommended to leave about 150 cm (5 feet) of extra cable at the amplifier end to facilitate positioning and installation of the amplifier. Do not use staples, nails or other metal objects to secure the cables. You will get the best sound quality and least amount of hum by keeping the cables away from other electrical wires and cables.

Pay attention to connecting the polarity of the amplifier correctly with the speakers in each speaker group (speakers should be connected RED + with RED + amplifier connector, BLACK – with BLACK – amplifier connector).



Before connecting make sure that your amplifier is turned off. Do not let bare speaker wires touch each other or any metal part of this unit it can damage this amplifier and/or speakers. This may void your warranty.


Please refer to your speaker instruction manual for more information.

Connecting speaker cables

Speaker cables have 2 conductors. Each conductor should be connected to a separate speaker connector - mind the polarity while connecting.

For each conductor:

1. Remove approximately 10 mm (3/8") of insulation from the end of the conductor. Twist the bare wires firmly together.
2. Loosen the speaker connector.
3. Insert the bare wires of the conductor into the gap of the speaker connector.
4. Tighten the speaker connector.

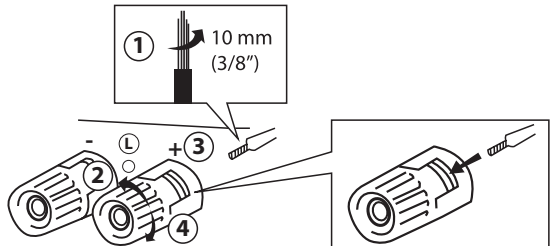


Connecting via banana plug



Mind the polarity while connecting.


Note! An insert hole for the banana plug in some speaker connectors maybe secured with a plastic plug - make sure to remove this plastic plug before inserting the banana plug.

1. Tighten the speaker connector.
2. Insert the banana plug into the end of the corresponding connector.

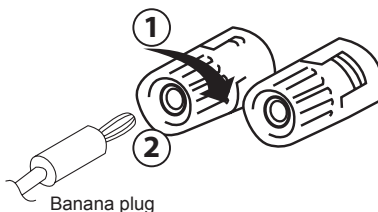

Hooking Up the Amplifier

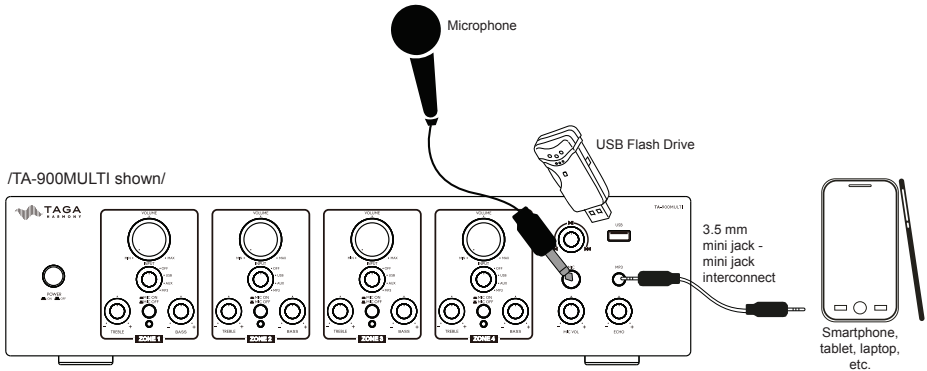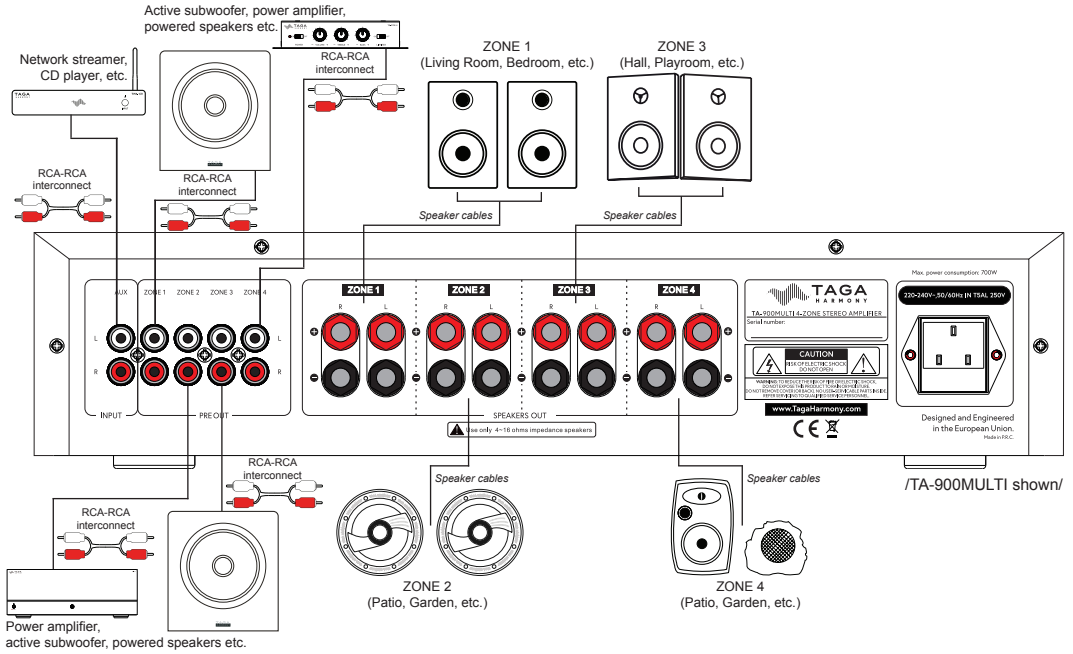



 



 
 


 

 
1. Make sure the amplifier is turned off (the Power Switch  OFF and the Power Cable is removed from the wall outlet).
2. Turn the Volume Regulator of each ZONE to MIN (max counter clockwise).
3. Using speaker cables connect your speakers to the SPEAKERS OUT connectors (choose the ZONES you want to use).
Check „Hooking Up Speaker Cables” for more details.
4. If you want to play music from audio source devices equipped with an analog output (CD player, Satellite tuner, Network streamer, Music player, Smartphone, Laptop etc.) choose the corresponding interconnect cables and connect the devices to the analog inputs (CD, MP3).
5. If you want to play digital audio files connect a USB Flash Drive to the USB Port.
Make sure that this amplifier supports the files you want to play.
Check “Play from a USB Flash Drive” for more details.
6. [TA-900MULTI only] Preamplifier Output (PRE OUT): the amplifier is equipped with the preamplifier outputs independent for each zone. Using RCA-RCA interconnect cables you can

Hooking Up the Amplifier

connect to them external amplification devices (power amplifier, powered speakers, active subwoofer etc.) or recording devices (CD recorder etc.).

Check "Preamplifier Output Connection (PRE OUT)" for more details.

7. If you want to use a microphone: using a 6.35 mm (1/4") jack interconnect cable connect it to the Microphone 6.35 mm (1/4") input (MIC).
8. External audio equipment connection options:

TA MULTI Input / Output	Audio equipment Input / Output	Connection Cable
<p>AUX input</p> 	<p>Output - RCA sockets</p> 	<p>RCA-RCA interconnect (not supplied)</p> 
<p>MP3 3.5 mm (1/8") input</p> 	<p>Outputs: 3.5 mm (1/8") socket</p>  <p>or RCA sockets</p> 	<p>3.5 mm mini jack - mini jack interconnect (not supplied)</p>  <p>3.5 mm mini jack - RCA interconnect (not supplied)</p> 
<p>PRE OUT output</p> 	<p>Preamplifier input</p> 	<p>RCA-RCA interconnect (not supplied)</p> 
<p>MIC 6.35 mm (1/4") input</p> 		<p>6.35 mm jack interconnect (not supplied)</p> 

The sockets and ports shown for external equipment and connection options may differ depending on the device.

9. Your amplifier is ready for operation.



Only speakers within range of impedance 4 - 16Ω may be connected to this amplifier. Connecting speakers outside this range may damage this amplifier and/or speakers. This may void your warranty.





Only speakers of the same impedance may be used for a single ZONE (for example: ZONE 1: if you use 4Ω speakers in the left channel then you have to use 4Ω speakers in the right channel) – otherwise this amplifier and/or speakers may be damaged. This may void your warranty.



Each ZONE may use different impedance of speakers, for example: ZONE 1 4Ω speakers, ZONE 2 8Ω speakers, ZONE 3 6Ω speakers etc.

Operation

1. Plug the Power Cable to the amplifier and into the electrical outlet.
2. Turn on the amplifier – press the Power Switch (the Power Switch  ON). The Power Status Indicator around the Power Switch should turn on in a few seconds.
If it does not, it means that the amplifier is working under an abnormal condition (a protection mode) – turn off the power, unplug the Power Cable and check whether some of the cables are not short circuited.
After fixing the cables turn the amplifier on.
3. For each ZONE which you want to use, using the Input Selector knob select which audio source you want to play (corresponding to the selected input).
 OFF - the ZONE is inactive.
Make sure the audio source is properly connected to the front and rear panel inputs.
4. Turn on your audio source and start playback.
5. For each ZONE regulate volume on the amplifier to adjust the level of sound.

Note! Check “Additional Information” for other useful operating instructions.



High volume levels may damage this amplifier and/or speakers.
This may void your warranty.

Operations available individually for each ZONE:

VOLUME Regulator:

Using the Volume Regulator on the front panel, you can adjust the sound volume from minimum (the knob – max counterclockwise) to maximum (the knob – max clockwise).



Distortion and sound quality worsening may occur when the knob is in the maximum position. It may damage the amplifier and/or speakers.
This may void your warranty.

TREBLE regulator:

You can adjust treble output of the amplifier. The default: the knob is in the center position: the marker on the knob in the vertical position.

Turn the knob counterclockwise (-) to decrease the amount of high frequencies.

Turn the knob clockwise to increase the amount of high frequencies (+).

BASS regulator:

You can adjust bass output of the amplifier. The default: the knob is in the center position: the marker on the knob in the vertical position.

Turn the knob counterclockwise (-) to decrease the amount of low frequencies.

Turn the knob clockwise (+) to increase the amount of low frequencies (+).



Using the BASS / TREBLE regulators at high volume levels may damage this amplifier and/or speakers.
This may void your warranty.

Operation

INPUT Selector:

For each ZONE you can select one of three available audio inputs (USB, AUX, MP3). If you do not want to play music from these audio inputs in the ZONE, move the Input Selector knob to OFF.

The Input Selector works independently from the Microphone Switch – you can broadcast only music or only voice from the microphone or mix both.

Preamplifier Output connection (PRE OUT) [TA-900MULTI only]:

This amplifier is equipped with the preamplifier output, which allows connecting amplification or recording equipment such as a power amplifier, powered speakers, active subwoofer or a CD recorder.


Each zone is equipped with an independent preamplifier output.


The audio signal selected for the given zone (from the selected input) is directed to the PRE OUT corresponding for this zone, and its level is variable controlled by the Volume Regulator of the zone.

All sound adjustments (Bass / Treble) will affect the sound transmitted to the PRE OUT. The output to the SPEAKERS OUT is still active and it works simultaneously with the PRE OUT.

MICROPHONE Switch (MIC ON / MIC OFF):

For each ZONE you can broadcast voice from the microphone (not supplied with this product) – separately or mixed with the background music from the audio inputs (USB, AUX, MP3).

Mic Switch  OFF - the voice from the microphone is not transmitted to the ZONE (the Microphone LED Indicator will not be illuminated).

Mic Switch  ON - the voice from the microphone is transmitted to the ZONE (the Microphone LED Indicator will be illuminated).

If the audio input is selected (check “INPUT Selector” for more details) and the background music is playing, the voice from the microphone and the music will be mixed.

Make sure to adjust Microphone Level and Echo Regulators to control the microphone functions.



The voice from the microphone will be simultaneously broadcasted to all ZONES.

If you do not want it to be transmitted to a certain ZONE make sure to switch off the MIC Switch for the ZONE.

Operations available only simultaneously for all ZONES **(changes will affect all ZONES):**

Microphone:

This amplifier allows a connection of a wired microphone (not supplied with this product) and voice mixing with the background music.

MIC VOL - microphone level regulator:

You can adjust the sound level of the microphone relative to the currently played background music.

To make the microphone sound more audible turn the MIC VOL knob clockwise (+) and to make it less audible rotate the knob counterclockwise (-).

Operation

The master volume level for both the microphone and background music is regulated by the Volume Regulator.

The MIC VOL control is also active without the background music (only microphone is working).

The default: the knob is in the center position: the marker on the knob in the vertical position.

ECHO - microphone echo regulator:

You can adjust the level of reverberation of the microphone.

To increase the reverberation turn the ECHO knob clockwise (+) and to decrease it rotate the knob counterclockwise (-).

The default: the knob is in the center position: the marker on the knob in the vertical position.



Using the microphone at high volume levels may damage this amplifier and/or speakers. This may void your warranty.

Play from a USB Flash Drive

This amplifier can play music from most USB Flash Drives and supports most APE / FLAC / MP3 / WAV audio files.

1. Using the Input Selector knob select the USB Input.
If the USB flash drive is not inserted then the USB Input Led Indicator will be flashing.
2. Insert the USB Flash Drive into the USB Port located on the front panel.
3. When compatible music files are detected then the playback will start automatically.
In the Play mode the USB Input Led Indicator will be illuminated continuously.
If the USB Flash Drive is empty or contains non-supported files, the USB Input Led Indicator will start flashing.
4. Press the USB Knob ►| once to pause the playback.
Press it again to resume the playback.
In the Pause mode the USB Input Led Indicator will start flashing.
5. Rotate the USB Knob ►►| clockwise to play the next song.
If the last song is detected the playback will start from the first one on the USB Flash Drive.
6. Rotate the USB Knob |◄◄ counterclockwise to play the previous song.
If the first song is detected the playback will start from the last one on the USB Flash Drive.



Depending on the USB Flash Drive type, format and number or arrangements of folders and files some music files may be played differently or may not be recognized by the amplifier.



We recommend to change input to another one before removing the USB Flash Drive.



The support of files in the formats listed in the specifications may be limited depending on the sampling frequency and bit rates - files with too high parameters may not be read.

Additional Information

Break-In

Your TAGA Harmony amplifier sounds great immediately after it is taken out of the carton but as all amplifiers, the internal components of this amplifier require a “break-in” period to reach its full sonic capabilities.

During the “break-in” period it is recommended to operate the amplifier at moderate volume levels.

The first level of the “break-in” is reached after approximately 10 hours of play.

The optimal level of the “break-in” is reached after approximately 40 to 60 hours of play.

Turn off procedure

Make sure to turn off the amplifier first when powering down your system.



If the amplifier was turned off even for a short period of time, you should wait at least 2 minutes before turning it back on.

Do not turn it ON then OFF and then ON again in quick succession.

Follow this procedure each time you turn your amplifier OFF / ON.

This precaution will minimize the stress (high voltages) on internal components.

Noise floor

It is a normal phenomenon that an amplifier may produce some amount of noise (called noise floor or self-noise) which can be audible in speakers (in one or both channels).

Power transformer – Power filters and conditioners

It is a normal phenomenon that the device’s power transformer may generate a certain amount of audible noise.

Very loud operation of the power transformer may be caused by low quality of power supply (voltage surges etc.).

In such a case, we suggest using a power filter or conditioner - you can also try to power this product from a different power line than other devices (e.g. from a power outlet in another room).

Specifications

	TA-900MULTI	TA-600MULTI
Type	Custom Install 4-zone stereo amplifier Class A/B	Custom Install 4-zone stereo amplifier Class A/B
Zones / number of speakers	4 independent stereo zones	4 independent stereo zones
Power Output / impedance	All zones driven (power per zone): 2 x 60W RMS 4Ω 2 x 45W RMS 8Ω One zone driven: 2 x 85W RMS 4Ω / 2 x 55W RMS 8Ω Pairs of 4 to 16Ω speakers can be used in each zone.	All zones driven (power per zone): 2 x 18W RMS 4Ω 2 x 16W RMS 8Ω One zone driven: 2 x 30W RMS 4Ω 2 x 20W RMS 8Ω Pairs of 4 to 16Ω speakers can be used in each zone.
Microphone inputs	Single Sensitivity: 5mV ; THD 2% Frequency response: 50Hz –12kHz (±3dB)	Single Sensitivity: 10mV ; THD 2% Frequency response: 50Hz –12kHz (±3dB)
Digital inputs	USB (audio files: APE / FLAC / MP3 / WAV)	USB (audio files: APE / MP3 / WMA / WAV)
Analog inputs	AUX Stereo Jack 3.5mm (front panel)	AUX Stereo Jack 3.5mm (front panel)
Analog outputs	RCA Pre-Out (separate for each zone)	
Frequency response	20Hz - 20kHz (±3db)	20Hz - 20kHz (±3db)
Total Harmonic Distortions	≥1% (1kHz)	≥1% (1kHz)
Signal / Noise ratio	≥75dB (A-weighted)	≥75dB (A-weighted)
AC power / power consumption	220 - 240V 50/60Hz, 700W	220 - 240V 50/60Hz, 200W
Dimensions (H x W x D)	11 x 43 x 36.5 cm (including feet)	10.7 x 43 x 31 cm (including feet)
Weight	10.4 kg / pc.	6.6 kg / pc.

We reserve the right to change the technical data and the design of the product without notice as a result of further development.


We strongly advise to contact a professional installer or dealer in order to install TAGA Harmony products.

We recommend using high quality TAGA Harmony cables and other installation accessories.


Kit Content:

Amplifier	1EA
Power Cable	1EA
Instruction Manual	1EA

EU declaration of conformity

	<p>Your product is marked with the symbol shown on the left. As its manufacturer, hereby we declare that the product is in compliance with the following EU directives and regulations: 2014/30/EU (EMC) & 2014/35/EU (LVD) & 2011/65/EU (RoHS).</p> <p>The full text of the EU declaration of conformity is available from the manufacturer.</p>
---	---

Disposal of the product

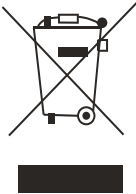	<p>Disposal of old electrical & electronic equipment (applicable in the European Union and other countries with separate collection systems)</p> <p>This symbol on the product or on its literature and packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the appropriate collection point for the recycling of electrical and electronic equipment. By ensuring that this product is disposed of correctly, you will help to prevent potential negative consequences for the environment and human health, which could be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local government office, your household waste disposal service or the shop where you purchased the product.</p>
--	--

TAGA EUROPE
POLPAK POLAND Sp. z o.o.
AL. JEROZOLIMSKIE 331A
05-816 REGULY k/WARSZAWY, POLAND
Email: Sales@TagaHarmony.com

www.TagaHarmony.com