




6

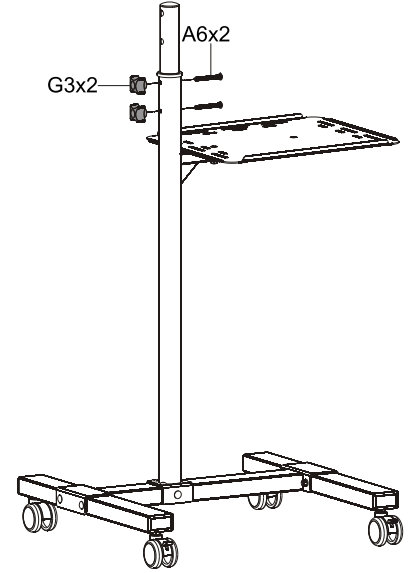


7

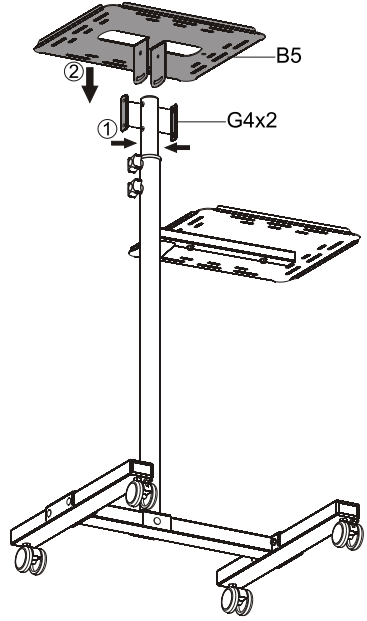

8

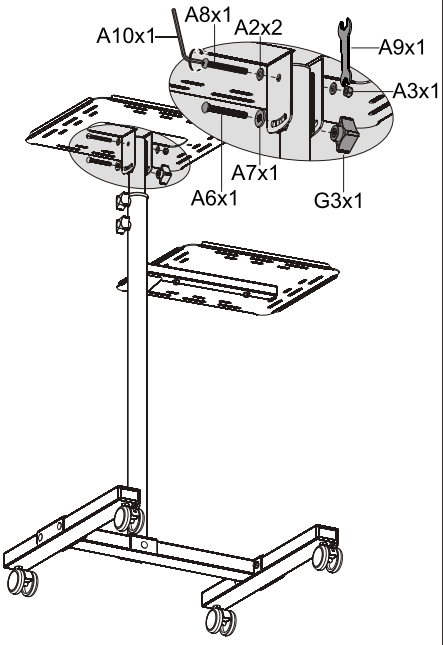


9

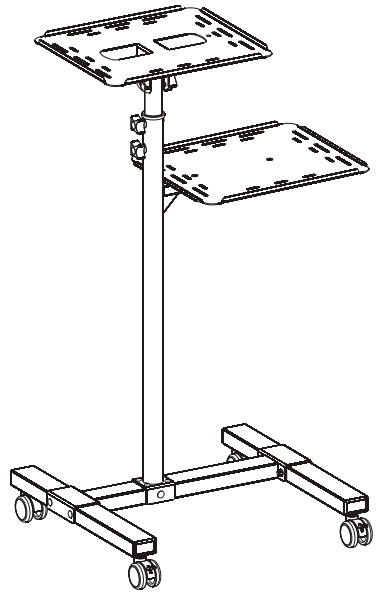

PUREMounts®

INSTALLATION MANUAL

PM-PCART-10

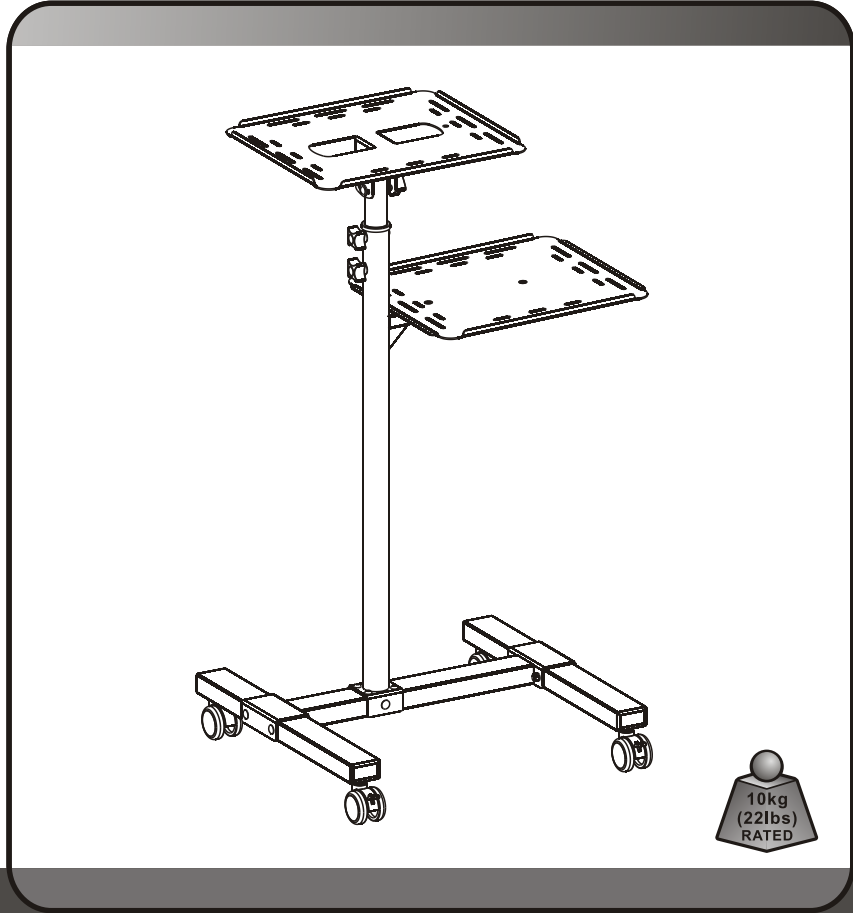













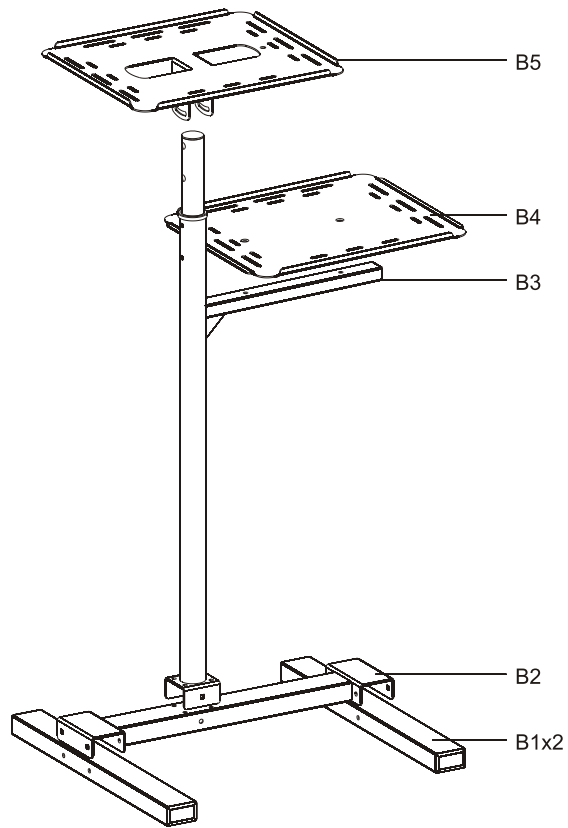

PROJECTOR CARTS

ASSEMBLY INSTRUCTIONS

PureLink GmbH
 Von-Liebig-Str. 10 | 48432 Rheine | Germany
 Phone: +49 (0) 5971 800 299 0

PureLink GmbH hereby declares that this product complies with Directive 1907/2006/EU and 2011/65/EU.



A1x5 M6x65 	A2x9 	A3x8 	A4x4 M6x12 
A5x2 M6x30 	A6x3 M6x50 	A7x1 	A8x1 M6x50 
A9x1 	A10x1 		
G1x2 	G2x2 	G3x3 	G4x2 